

HOW TO CARE FOR & MAINTAIN YOUR HIDEAWAY® BIN

(Compact, Deluxe and Soft Close Ranges)

NOTE: Diagrams indicating the different bin components can be found in the downloadable installation instructions for each bin model. This is located on our website in the INFO / DOWNLOADS section.



IMPORTANT INFORMATION

- Do not over fill your bin as contents could scratch your friction-fitted lid (Deluxe & Soft Close ranges only).
- Refrain from pushing down on rubbish inside your bucket/s as this creates extra pressure on the screw fixings inside the cabinet.

How to keep your Hideaway Bin clean

- DO NOT allow food and grime to build up on the surfaces of your bin. This may damage the protective powder coat or the metal components.
- DO NOT use harsh abrasive cleaners, commercial cleaning products, scouring pads or hard brushes.
- You should clean your Hideaway Bin a minimum of every 3 months using warm soapy water and a soft cloth. This includes removing the buckets and liner holders on your bin and cleaning the interior parts of your bin unit, especially the friction fitted lid on Deluxe and Soft Close bin models. Dry all parts after cleaning.
- When cleaning, try to avoid getting the runners wet, however, if this happens ensure you dry the runners well and then regrease with a small amount of petroleum jelly, such as Vaseline, or a clear silicone grease.

How to care for, remove and replace runners for cleaning

TO CARE FOR YOUR RUNNERS (all bin models):


- Over time you may need to lubricate your runners for continued free movement. To do this, lubricate with a small amount of petroleum jelly, such as Vaseline, or a clear silicone grease. For Deluxe and Compact models, the runners can be separated, which makes it easier to clean and lubricate. See instructions below for separating runners.
- Your Hideaway Bin has ball bearing runners which may gain a memory over time. This occurs due to the bin usually being opened partially during everyday use. This can make it difficult to open the bin fully. To ensure your bucket/s will always come clear of your bench top, every so often place a firm grip on either side of your handle/door bracket and slowly, but firmly, pull the unit towards you. Continue to pull the runners towards you until they reach their maximum extension. Then close your unit fully again.

TO SEPARATE RUNNERS FOR CLEANING (all Deluxe models and Compact KC240 & KC235 models):

- Remove the buckets from your unit. Fully extend the runners. To do this, find the black levers located on the outer side of both the left and right runner.

Runners engaged - push left lever up and right lever down


Runners disengaged - pull the runner inner clear of the outer

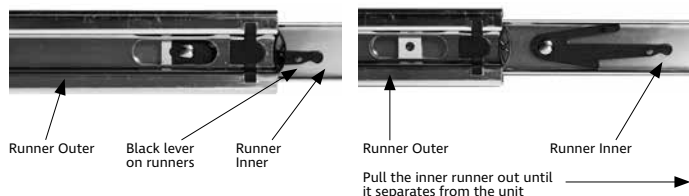

- Simultaneously, push the left lever up and the right lever down and pull inner of the runners towards you until it separates completely from the unit. Set runner inner with collar, handle/door bracket attached aside in a safe location.
- Push the outer runners attached to the top mounting panel back inside the unit.

TO SEPARATE RUNNERS FOR CLEANING (all other Compact models):

- Remove the buckets from your unit. Fully extend the runners.
- Press the yellow runner release latches on both sides.
- Holding the mounting panel securely, pull the handle or door bracket to separate the inner components from the mounting panel.


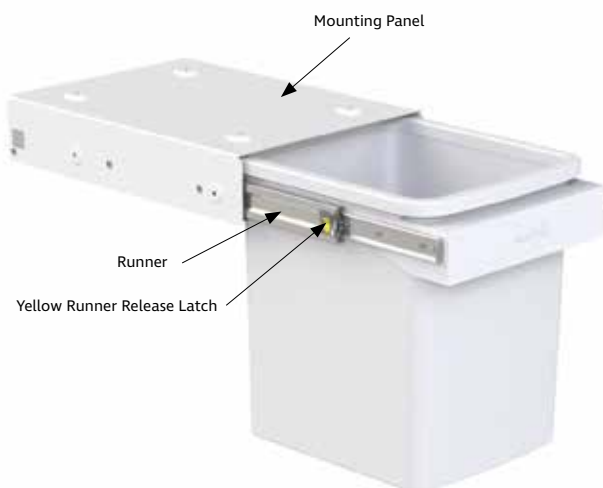


TO CLEAN AND REATTACH RUNNERS (Deluxe and Compact models only):

- Ensure the outer runners attached to the top mounting panel are pushed all the way inside the unit. With the outer runners, ensure the inner slider is pulled all the way towards the front of the unit.
- Wipe runners with a clean cloth, cotton bud or toothbrush. Apply a small amount of petroleum jelly, such as Vaseline, or a clear silicone grease to the runners.
- Line up the inner runners (with collar attached) to the outer runners that are attached to the top mounting panel (which is installed in your cupboard).
- Push the inner runners all the way in until the unit closes to engage the runners. Pull unit open again. The runners should move with ease indicating correct positioning.



Push firmly on the back of the unit to ensure the lid clears the hooks located on the right and left hand sides of top mounting panel

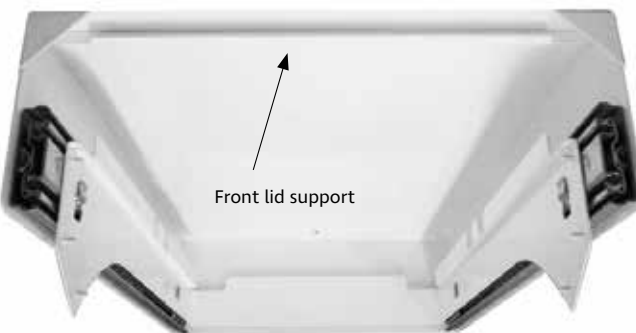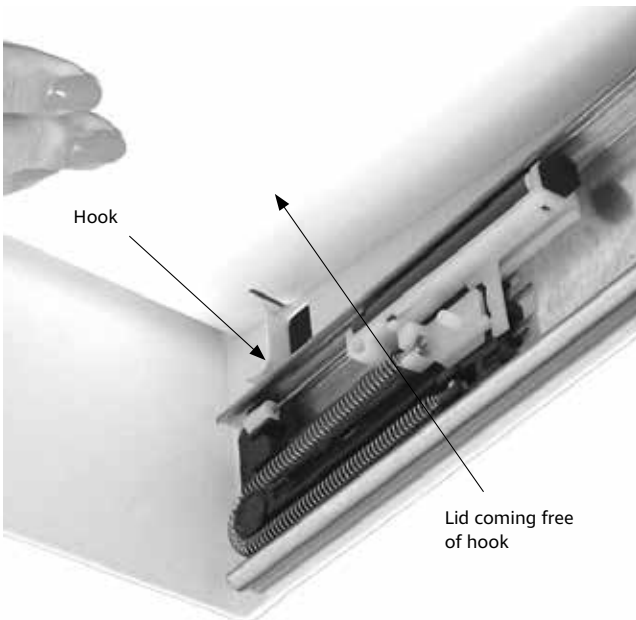

The unit should look like this with the friction- fitted lid removed (Soft Close model shown with door bracket removed for illustration).

How to remove the friction-fitted lid from a Deluxe or Soft Close Bin (for cleaning)

NOTE: Compact Bin models DO NOT have removable lids.

- If you have a Deluxe model: Remove and separate the runners as explained in the above instructions.
- If you have a Soft Close model: remove the buckets from your unit. The runners on the Soft Close range do not separate.
- Both ranges: you need to clear the hooks at the back of the lid. Place your hand at the back of the lid and then push up and pull forward in the same motion. This will release the lid. Remove the lid clear of the main unit. This will then allow you to clean the lid.

How to reinstall the friction-fitted lid into your Deluxe or Soft Close Bin

- Rest the foam on top of the friction-fitted lid. **NOTE:** the plastic sleeve stays on the foam to protect it.
- Slide the friction-fitted lid and foam inside the top mounting panel, stopping just before the rear hooks. **NOTE:** the large fold on the friction-fitted lid sits at the front of the unit, the rear of the lid has the slots which reconnect with the hooks located on the top mounting panel.
- Check that the foam is behind the front lid support.
- Simultaneously, with one hand, push firmly up on the back of the friction-fitted lid, push the lid above the hooks and drop into location. Whilst this is happening, with the other hand push the front of the lid upwards to ensure it rests on the front lid support - located at the front of the top mounting panel.
- The lid should move up and down a small amount with ease indicating correct installation.
- **If you have a Deluxe model:** reattach the runners as explained in the above instructions.

Replacement parts for your Hideaway Bin can also be purchased via our website!

HIDEAWAY NEW ZEALAND 09 426 7456
info@hideawaybins.co.nz / hideawaybins.co.nz

HIDEAWAY AUSTRALIA 1800 042 642
info@hideawaybins.co.nz / hideawaybins.com.au


Hideaway[®]

MEMBERS AND SUPPORTERS OF

NKBA
National Kitchen & Bathroom Association - NZ


NEW ZEALAND
MADE[®]