



KK4F INSTALLATION INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE INSTALLING THIS BIN UNIT. FAILURE TO INSTALL THE BIN CORRECTLY MAY VOID WARRANTY.

IMPORTANT INSTALLATION INFORMATION FOR HANDLE PULL MODELS:

For handle pull models the stated product installation width applies to installations where the door fully clears the cabinet opening and may be hinge dependent. The top hinge should be a minimum of 150mm from the top of the door panel and additional carcass width may be required.

BENCH OVERHANG CLEARANCE:

This Hideaway Deluxe Floor Mount model has been designed with over extension drawer runners which allow for a bench overhang of up to 35mm, allowing the bucket to come clear of the bench.

FASTENER IDENTIFICATION:



**16mm Surefix
Screw**

HIDEAWAY NEW ZEALAND 09 426 7456
info@hideawaybins.co.nz / hideawaybins.co.nz

HIDEAWAY AUSTRALIA 1800 042 642
info@hideawaybins.co.nz / hideawaybins.com.au



MEMBERS AND SUPPORTERS OF



INSTALLATION INSTRUCTIONS START HERE

Step 1 - Install the floor mount bin within the cupboard (refer to the Installation Dimensions below)

- With the bin standing on the floor mount brackets, fully extend the runners and remove the buckets.
- Close the runners fully.
- Place the unit inside the cabinet in the desired location (ideally place the bin in the centre of the space provided). Secure to base of cabinet using screws provided. Mounting holes are located at the base of the floor mount brackets.
- If hinges are used on the door that do not allow the handle of the bin to clear the opening fully, allow an extra 10mm width.

Step 2 – Place the bin bucket(s) into the collar.

- Check that the bin opens and closes smoothly and that there is no contact between the bin and the mounting panel.
- Please leave the Care and Maintenance instructions inside the bucket for the owner.

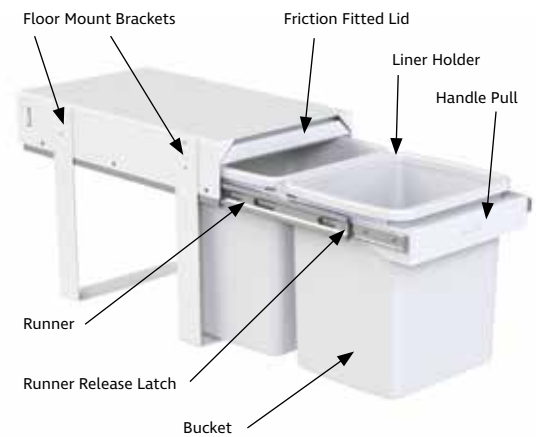


FIG 1 - Bin Parts

INSTALLATION DIMENSIONS

Model	Width	Height	Depth	B1	B2	B3	B4	B5
KK4F	306	348	520	56	94	368	406	231

