

The Hideaway® Soft Close Installation Instructions

Step 1 - Unpack Hideaway Bin

- Remove all polystyrene.
- Remove the bucket/s.
- Please leave the Glad sample pack and instructions inside the bucket for the homeowner.

Step 2 - Remove the door bracket (fig 2 & 3)

- Place the top mounting panel upside down on a flat surface with the tracks facing upwards.
- **Fully extend the tracks.** It is critically important that you extend as far as they will open.
- Undo the nut on either side of the door bracket (these nuts attach the door bracket to the collar).
- Remove door bracket - set nuts aside in a safe place (see Fig 2).
- NOTE: VERY IMPORTANT - do not remove the collar from the tracks or the tracks from the top mounting panel.

Step 3 - Remove the friction fitted lid from top mounting panel (fig 4a, 4b & 4c)

- Top mounting panel should still be upside down on a flat surface with the tracks facing upwards.
- To remove the friction fitted lid - push firmly down on the lid at the back of the unit.
- Push firmly, distributing pressure to both sides of lid to ensure the lid clears the hooks located on the left and right hand sides of the top mounting panel.
- Simultaneously, pull the friction fitted lid forwards until it pulls clear of the top mounting panel.
- Pull the foam pad clear of the top mounting panel. Set aside, leaving the plastic cover on.

Step 4 - Install your bin within your cupboard / carcass

- Position the top mounting panel (now clear of the door bracket, friction fitted lid and foam pad) inside, beneath your carcass / shelf.
- Position in the centre of the carcass. Six mounting holes are located in the top mounting panel for fixing. Secure the top mounting panel into place with the six 20mm sure fix screws provided. Any additional mounting holes added will null and void warranty.

Step 5 - Reinstall the friction fitted lid and foam into top mounting panel




- Rest the foam on top of the friction fitted lid - the flat side of the friction fit lid should be towards the ground with the folds facing upwards.
- Slide the friction fitted lid and foam inside the top mounting panel, stopping just before the rear hooks. (Note: the large fold on the friction fitted lid sits at the front of the unit, and the rear of the lid has the slots which reconnect with the hooks located on the top mounting panel at the rear).
- Simultaneously, with one hand, push firmly up on the back of the friction fitted lid, push the lid above the hooks and drop into location. Whilst this is happening, with the other hand push the front of the lid upwards to ensure it rests on the metal support (located at the front of the top mounting panel - fig 4c).
- The lid should move up and down slightly with ease, indicating correct installation.

Step 6 - Reattach the door bracket

- Extend the tracks once again.
- Align the door bracket to the collar and lightly tighten in place using the six nuts provided.
- NOTE: Lightly tighten nuts to allow fixing of door front.

Step 7 - Fix cabinet fascia to door bracket of bin

- Place a 4mm self tapping screw into the centre hole of the door bracket - ensure the point of the screw is only protruding approx 3mm.
- With the bin closed fully, align the front fascia of the cupboard against the door bracket. A small hit with your hand to the location of the screw will help provide a drilling indication.
- Lie cabinet fascia on a flat surface with the internal part of the door facing upwards. Using the

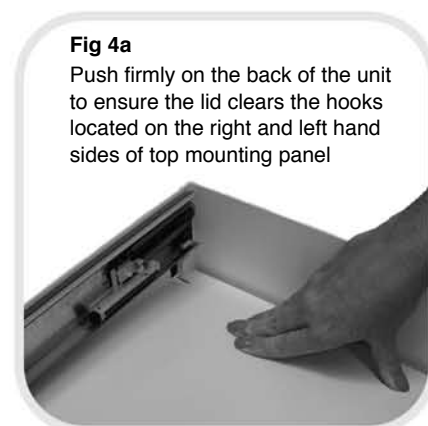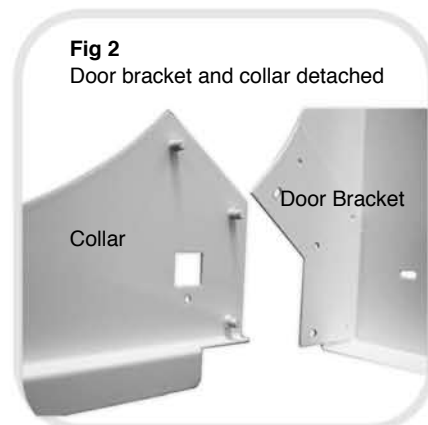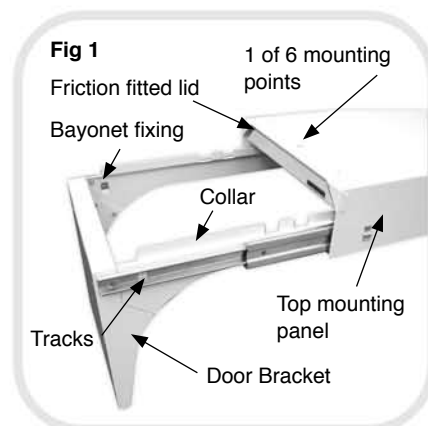

drilling mark made to the centre point on the cabinet fascia, drill a hole to hold centre screw (if required for ease of installation, remove the door bracket from the unit once again. Attach the door bracket with the centre screw to the cabinet fascia and then reattach the door bracket to the collar of the bin once again.)

- Place the cabinet fascia against the door bracket and tighten the centre screw. Check the positioning and align.
- Proceed to marking, screwing and tightening the six remaining screws. Vertical and horizontal adjustment is provided on the door bracket.
- To adjust the angle of your kitchen fascia: loosen or tighten the six nuts on the door bracket until desired angle is achieved. The centre nut provides pivot. Once the desired angle is achieved, firmly tighten all six nuts on the door bracket.

IMPORTANT INSTALLATION INFORMATION: At all stages of the installation ensure the spring carrier on the track is engaged.

Before you close the unit ensure the spring carrier is loaded on your soft close track. Failure to do so will cause damage to your tracks. In all cases replacement is required.

Figure 5a - demonstrates the spring carrier in the engaged position. This is the correct positioning and the bin is ready to be closed and used.

Figure 5b - demonstrates the spring carrier in an unengaged position. This is incorrect positioning and will cause damage to your tracks. To move into engaged position, move the white spring carrier along its track until it clicks into location demonstrated by arrow in diagram below.

Figure 6 - demonstrates a damaged track. If you do not check your tracks and ensure at all stages the spring carriers are in an engaged position you will bend the white guiding arm on the shock absorber. Once this has happened you have damaged your tracks and will require new ones. The supply of new tracks, without additional cost, is at the discretion of Kitchen King Ltd in all cases.

Step 8 - Place bin buckets into checkouts on collar

- Fully extend the tracks.
- Place bucket/s into the checkouts provided on the collar. The back bucket must sit over the lip on the back of the frame. If the bucket/s do not sit within these checkouts the unit will not close properly.
- **Trade** - please leave the Glad sample pack inside the bucket.
- **Homeowner** – you will find a Glad sample pack in the base of your bucket. Slide the Glad Kitchen Tidy Bag into your bucket/s ensuring the bag will not interfere with the tracks. (NZ only)
- Place liner holders on top of bucket/s.

Installation complete!

Questions?

NEW ZEALAND

Phone 09 426 7456

Email info@hideawaybins.co.nz

Web www.hideawaybins.co.nz

AUSTRALIA

Freephone 1800 042 642

Email info@hideawaybins.co.nz

Web www.hideawaybins.com.au

