

HOW TO

(Compact Range)

NOTE: Diagrams indicating the different bin components can be found in the downloadable installation instructions for each bin model. This is located on our website in the INFO / DOWNLOADS section.

CARE FOR & MAINTAIN YOUR HIDEAWAY BIN



IMPORTANT INFORMATION

- Do not overfill your bin as contents could scratch your top mounting panel.
- Refrain from pushing down on rubbish inside your bucket/s as this creates extra pressure on the screw fixings inside the cabinet.

How to keep your Hideaway Bin clean

- DO NOT allow food and grime to build up on the surfaces of your bin. This may damage the protective powdercoating or the metal components.
- DO NOT use harsh abrasive cleaners, commercial cleaning products, scouring pads or hard brushes.
- You should clean your Hideaway Bin a minimum of every three months using warm soapy water and a soft cloth. This includes removing the buckets and liner holders on your bin and cleaning the interior parts of your bin unit. Dry all parts thoroughly after cleaning.
- When cleaning, try to avoid getting the runners wet, however, if this happens ensure you dry the runners well and then regrease with a small amount of petroleum jelly, or a clear silicone grease.

How to care for, remove and replace runners for cleaning

TO CARE FOR YOUR RUNNERS (all bin models):


- Over time you may need to lubricate your runners for continued free movement. To do this, lubricate with a small amount of petroleum jelly, or a clear silicone grease. DO NOT USE silicon spray, WD40, CRC 556, or other similar sprays. The runners can be separated, which makes it easier to clean and lubricate. See instructions below for separating runners.
- Your Hideaway Bin has ball bearing runners which may gain a memory over time. This usually occurs due to the bin being opened only partially during everyday use. This can make it difficult to open the bin fully. To ensure your bucket/s will always come clear of your bench top, every so often place a firm grip on either side of your handle/door bracket and slowly, but firmly, pull the unit towards you. Continue to pull the runners towards you until they reach their maximum extension. Then close your unit fully again.

TO SEPARATE RUNNERS FOR CLEANING


(Compact HC235 & HC240 models):

- Remove the buckets from your unit. Fully extend the runners. To do this, find the black levers located in the middle on the outer side of both the left and right runner.
- Simultaneously, push the left lever up and the right lever down and pull runner inner towards you until they separate completely from the unit. Set runner inner with collar, handle/door bracket, and door if attached, aside in a safe location.
- Push the outer runners attached to the top mounting panel back inside the unit.

Runner engaged - push left lever up and right lever down

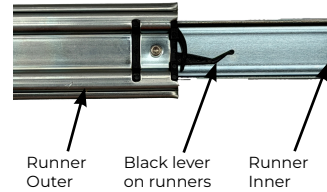

Runner disengaged - pull the runner inner clear of the outer

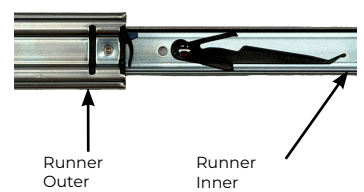


Pull the inner runner out until it separates from the unit



TO SEPARATE RUNNERS FOR CLEANING

(All other Compact models):

- Remove the buckets from your unit. Fully extend the runners.
- Press the yellow runner release latches on both sides.
- Holding the mounting panel securely, pull the handle or door bracket to separate the inner components from the mounting panel.

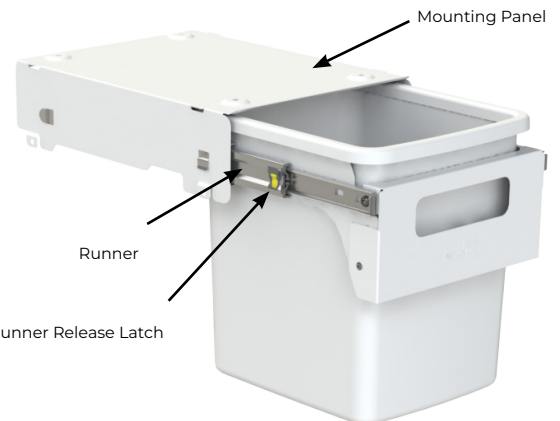

TO CLEAN AND REATTACH RUNNERS

- Ensure the outer runners attached to the top mounting panel are pushed all the way inside the unit. With the outer runners, ensure the inner runner is pulled all the way towards the front of the unit.
- Wipe runners with a clean cloth, cotton bud or toothbrush. Apply a small amount of petroleum jelly, or a clear silicone grease to the runners. DO NOT USE silicon spray, WD40, CRC 556, or other similar sprays.
- Line up the inner runners (with collar attached) to the outer runners that are attached to the top mounting panel (which is installed in your cupboard).
- Push the inner runners all the way in until the unit closes to engage the runners. Pull unit open again. The runners should move with ease indicating correct positioning.

Replacement parts for your Hideaway Bin can be purchased via our website!